

SFRTPH-01-01/02 Nozzle replacement Instructions

Replacement time: 45 seconds

1: Tools, accessories



Tools: 1 slotted screwdriver



Accessories: nozzle

2: Product



Product


3: Remove the old nozzle



Step 1: Push the lock behind the cover to the right, to unlock the cover




Step 2: Push the cover forward and slide out the cover.

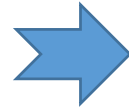

Step 3: Remove the cover



Step 5: Remove the nozzle

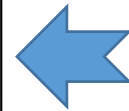

Step 4: Use a flat-blade screwdriver to insert into the gap between the nozzle and the upper housing, and pry out the nozzle.


4: Install the new nozzle



Step 1: Align the new nozzle with the outlet hole.




Step 2: Press the nozzle into the outlet hole.

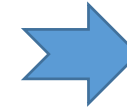

Step 3: Flatten the nozzle with thumb



Step 5: Push the lock behind the cover to the left to lock the cover. The nozzle replacement completed.

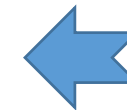

Step 4: Align the cover with the slot and push the cover back.