

SFRTPH-01-01/02  
Pedal Kit Replacement  
Instructions

# 1: Tools, accessories



Tools: 2 slotted screwdriver (one big and one small),  
1 Cross head hand drill



Accessories: Pedal kit

## 2: Product



Product

# 3: Remove the old pedal kit




Step 1: Place the toilet down on the table, use a small screwdriver, insert into the gap of the side cover, and open up the side cover



Step 2: After prying up the side cover, take out the side cover.



Step 3: Use a cross-head hand drill to loosen the two fixing screws of pedal kit, and take off the screws.

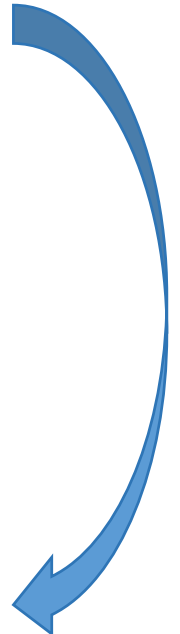

Step 4: Use a flat-blade screwdriver to insert the buckle, pry inward until the buckle is detached (there are two places)



Step 5: Grasp the pedal and shake it outward to loosen the pedal.



Step 6: After the pedal is loosened, take out the pedal kit

# 4: Install the new pedal kit




Step 1: Hold the new pedal kit, align pedal slot 1 and the part 2, as above



Step 2: After aligning the mark in step 1, insert the pedal kit.



Step 3: Press the pedal kit into the connecting sleeve

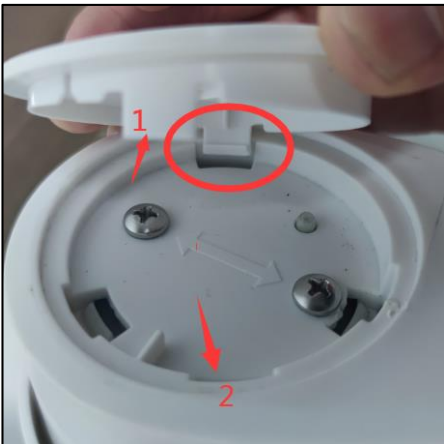

Step 6: Find the side cover and pedal holes, press them in flatly (as shown by the circle and arrow), and the pedal kit is installed.



Step 5: Use a cross-head hand drill to tighten the pedal fixing screws (torque 18~20KG)



Step 4: Check whether the pedal kit matches the toilet base after installation